



INSTRUCTION SHEET AND PARTS LIST

ſ

			PARTS LIST — 5
ITEM#	PART#	QTY	DESCRIPTION
1	503-010	1	FRAME-TOP
2	503-005	1	BASE
3	503-374	1	HANDLE
4	12024-4	1	SCREW, HEX HEAD CAP, 1/2-13×7.5
5	333-7	1	NUT, HEX, ½-13, NYLON INSERT
6	503-8	2	CASTER, RIGID
7	503-9	2	CASTER, SWIVEL
8	503-36A	1	DECAL, CAUTION
9	503-36	1	DECAL, MODEL NUMBER
10	503-4A	10	NIPPLE, ½" CONDUIT
11	77-041A	10	NUT, LOCK, ½" CONDUIT

WIRE 7	ΓREE		
ITEM#	PART#	QTY	DESCRIPTION
12	524-11	12	SCREW, HEX HEAD, 3/-16×1"
13	506-3	12	WASHER, FLAT
14	452-27	12	WASHER, LOCK
15	452-28	12	NUT, HEX, ¾-16
16	9548-7	1	PIN, PULL DETENT
17	503-230	1	BOLT, ADJUSTMENT
18	503-38	1	PIN, -COTTER, ³ /16"×2"
19	503-11	1	SCREW – HX HD, 10-32×1¼"
20	503-12	1	NUT – NYL. INS., 10-32
21	503-867	1	WIRE GUIDE
	ITEM# 12 13 14 15 16 17 18 19 20	12 524-11 13 506-3 14 452-27 15 452-28 16 9548-7 17 503-230 18 503-38 19 503-11 20 503-12	ITEM#PART#OTY12524-111213506-31214452-271215452-2812169548-7117503-230118503-38119503-11120503-121

Read and understand this material before operating the Wire Tree. Failure to understand how to safely operate this Wire Tree may result in injury or property damage. This manual is free of charge. All personnel who operate the Wire Tree should have a copy of this manual and read and understand its contents. To request a copy, call or write to the address below. All information, specifications and product designs may change due to design improvements or updates and are subject to change without notice. Current Tools does not assume any liability for damages resulting from misuse or incorrect application of its products.

CURRENT TOOLS • P.O. BOX 17026 • GREENVILLE, SC 29606 800.230.5421 or 864-721-4230 • FAX 864-721-4232 • www.currenttools.com