




Current Tools

FOR THE PROFESSIONAL ELECTRICIAN

Model 514 Supply Cart

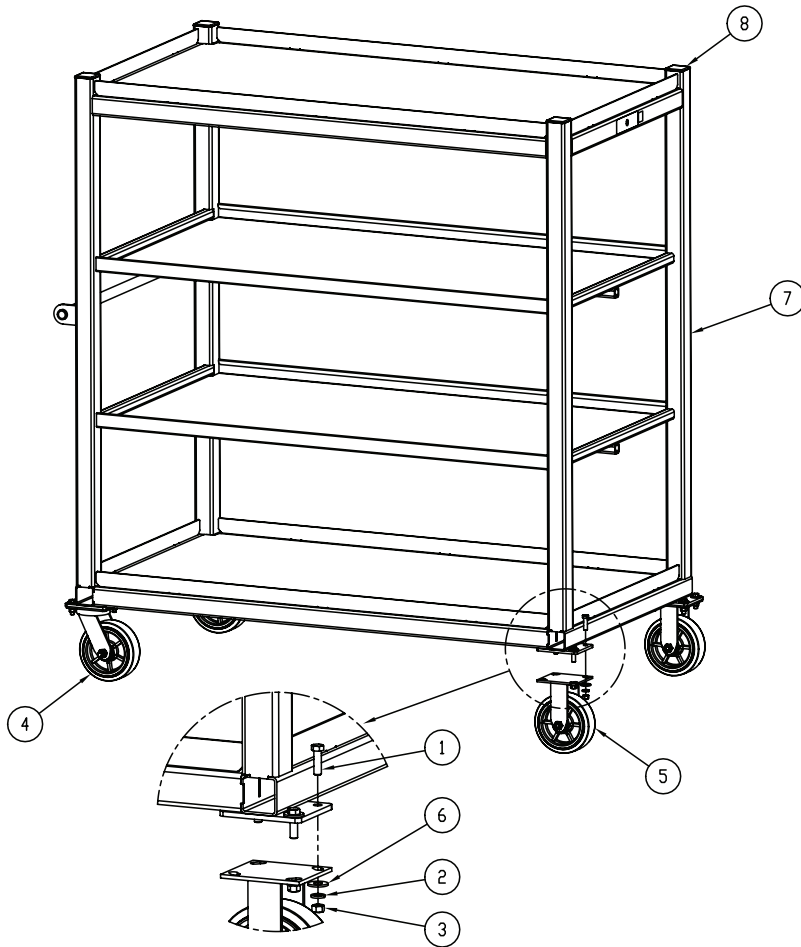

CAUTION
Only roll on a firm flat, smooth surface.

CAPACITY

- Maximum 1,000 lbs. total
- Maximum 250 lbs. per shelf, evenly distributed.

* NOTE: ONLY three sets of hardware (Item #s 1, 2, 3, 6) are used per caster.

INSTRUCTION SHEET AND PARTS LIST

PARTS LIST — 514 SUPPLY CART			
ITEM #	PART #	QTY	DESCRIPTION
1	281-2D	12	3/8-16 x 1.25 HEX HEAD CAP SCREW
2	452-27	12	WASHER-LOCK MEDIUM 3/8 ZINC
3	452-28	12	NUT-HEX ZINC (3/8-16)
4	506-1	2	CASTER - SWIVEL
5	506-2	2	CASTER - FIXED
6	506-3	12	WASHER - FLAT 3/8 (USS) ZINC
7	514-138	1	FRAME
8	752-107	4	PLASTIC CAP



Read and understand this material before operating or servicing the Supply Cart. Failure to understand how to safely operate and service this Supply Cart may result in injury or property damage.

This manual is free of charge. All personnel who operate the Supply Cart should have a copy of this manual and read and understand its contents. To request a copy, call or write to the address below.

CURRENT TOOLS • P. O. BOX 17026 GREENVILLE, SC 29606
800.230.5421 or 864.721.4230 • FAX 864.721.4232 • www.currenttools.com