




Current Tools

FOR THE PROFESSIONAL ELECTRICIAN

Model 516 Conduit/Material Cart

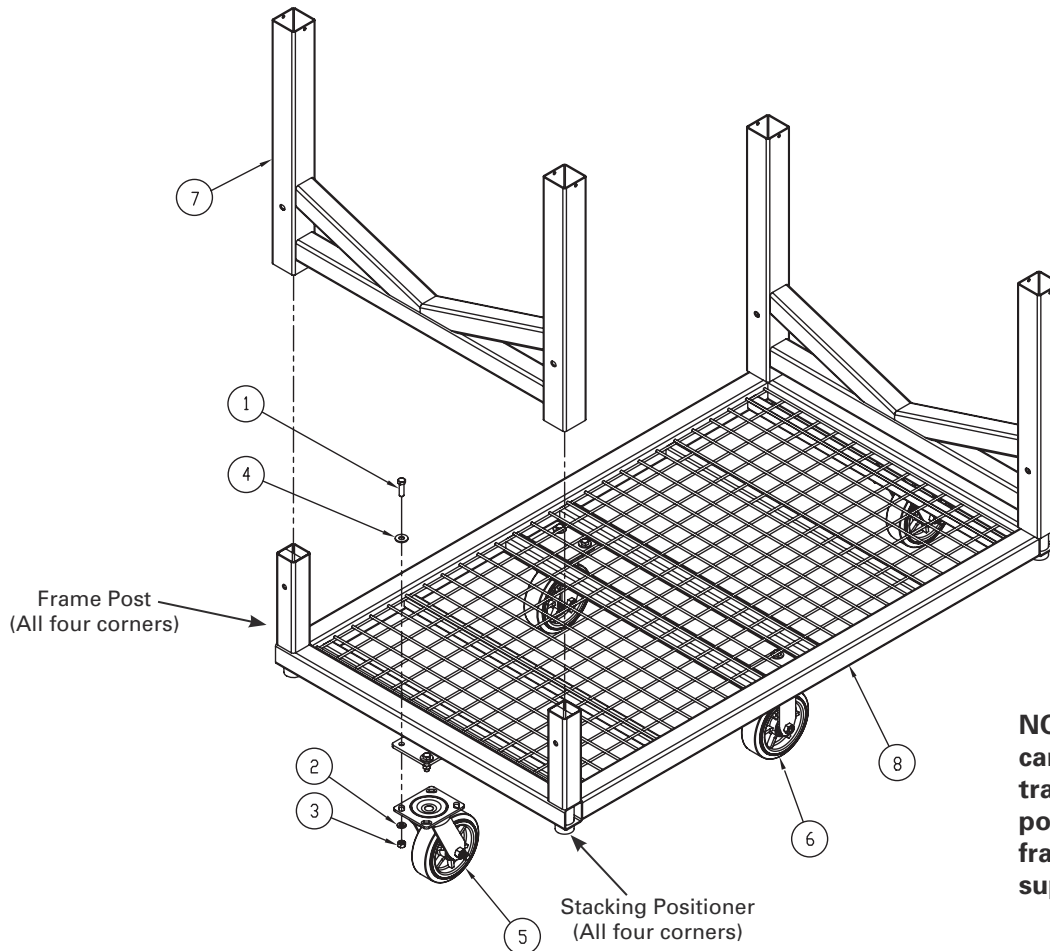

CAPACITY:

Maximum 2,000 lbs.
Evenly distributed.

CAUTION

- Only roll on a firm, flat, smooth surface.

NOTE: Empty conduit/material carts may be stacked for transport using the stacking positioners aligned with the frame posts. Remove both end supports before stacking carts.

INSTRUCTION SHEET AND PARTS LIST

PARTS LIST — 516 CONDUIT/MATERIAL CART

ITEM#	PART#	QTY	DESCRIPTION
1	281-2D	16	SCREW – HX HD CAP 3/8-16 x 1 1/4"
2	452-27	16	WASHER – LOCK 3/8
3	452-28	16	NUT – HEX 3/8-16
4	506-3	16	WASHER – FLAT 3/8

ITEM#	PART#	QTY	DESCRIPTION
5	516-003	2	CASTER – SWIVEL
6	516-002	2	CASTER – FIXED
7	516-101	2	END SUPPORT
8	516-113	1	BASE



Read and understand this material before operating the Conduit/Material Cart. Failure to understand how to safely operate this Conduit/Material Cart may result in injury or property damage.

This manual is free of charge. All personnel who operate the Conduit/Material Cart should have a copy of this manual and read and understand its contents. To request a copy, call or write to the address below.

CURRENT TOOLS • P. O. BOX 17026 GREENVILLE, SC 29606
800.230.5421 or 864.721.4230 • FAX 864.721.4232 • www.currenttools.com