


Model 516 Conduit/Material Cart



INSTRUCTION SHEET AND PARTS LIST

PARTS LIST — 516 CONDUIT/MATERIAL CART								
ITEM#	PART#	QTY	DESCRIPTION		ITEM#	PART#	QTY	DESCRIPTION
1	281-2D	24	SCREW – HX HD CAP 3/8-16 × 11/4"		5	516-003	4	CASTER – SWIVEL
2	452-27	24	WASHER – LOCK 3/8		6	516-002	2	CASTER – FIXED
3	452-28	24	NUT – HEX 3/8-16		7	516-101	2	END SUPPORT
4	506-3	24	WASHER – FLAT 3/8		8	516-113	1	BASE

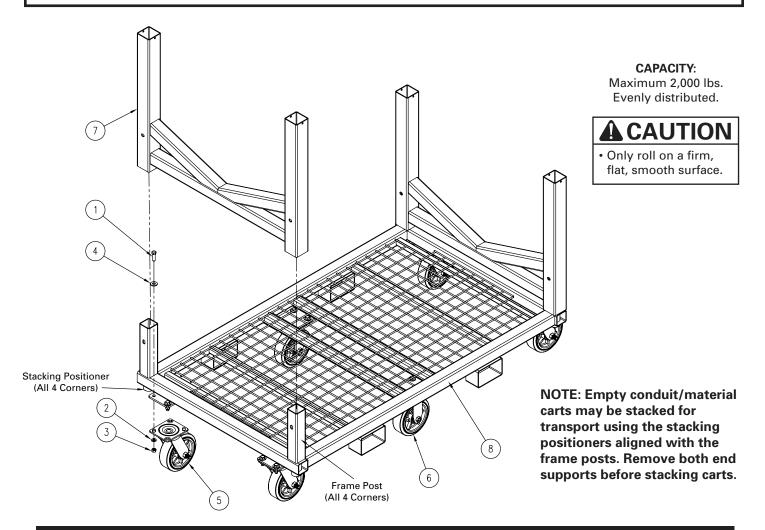

Read and understand this material before operating the Conduit/Material Cart. Failure to understand how to safely operate this Conduit/Material Cart may result in injury or property damage.

This manual is free of charge. All personnel who operate the Conduit/Material Cart should have a copy of this manual and read and understand its contents. To request a copy, call or write to the address below. All information, specifications and product designs may change due to design improvements or updates and are subject to change without notice. Current Tools does not assume any liability for damages resulting from misuse or incorrect application of its products.