



Current Tools

FOR THE PROFESSIONAL ELECTRICIAN


Model 556 Reel Cage

CAUTION

- ONLY ROLL ON A FLAT, SMOOTH SURFACE.
- UNLOAD THE TOP SPINDLES BEFORE THE BOTTOM AND LOAD THE BOTTOM SPINDLES BEFORE THE TOP.
- SWIVEL CASTERS SHOULD BE FULLY LOCKED PRIOR TO DISPENSING WIRE.

WIRE GUIDES CAN BE POSITIONED AS DESIRED

MAXIMUM CAPACITY
 SIXTEEN 14" DIAMETER SPOOLS
 - 100 LBS. PER SPINDLE
 - 1,600 LBS. TOTAL
 THE ABOVE LOADS MUST BE BALANCED

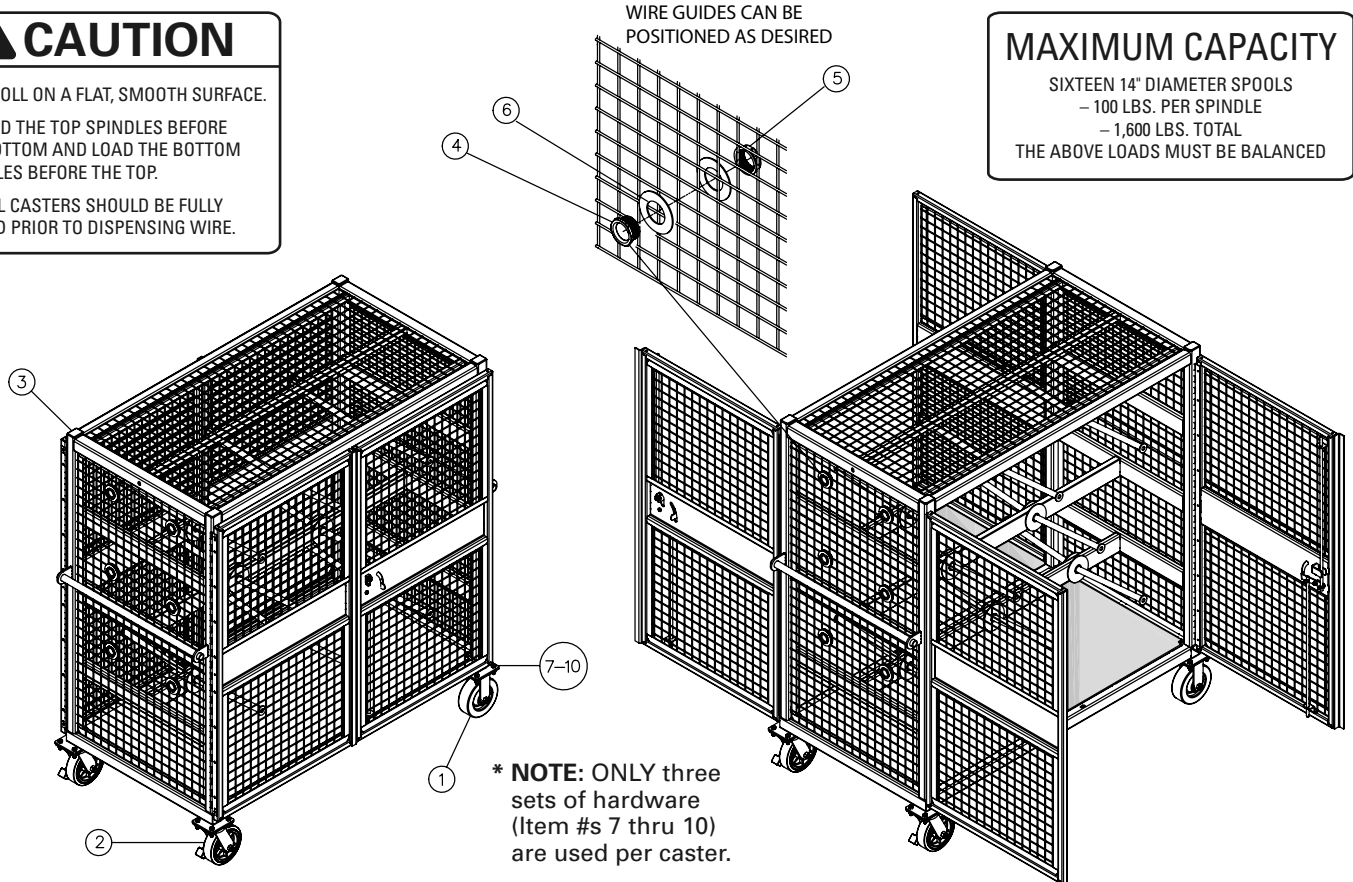

* NOTE: ONLY three sets of hardware (Item #s 7 thru 10) are used per caster.

INSTRUCTION SHEET AND PARTS LIST

PARTS LIST — 556 REEL CAGE

ITEM#	PART#	QTY	DESCRIPTION
1	506-2	2	CASTER - FIXED
2	513-001	2	CASTER - SWIVEL
3	556-001	4	PLUG - CAP
4	556-002	6	WIRE GUIDE - MALE
5	556-003	6	WIRE GUIDE - FEMALE
6	556-122	12	WASHER - WIRE GUIDE
7	5633WC-042	12	SCREW-HX HD CAP, 3/8-16 X 1.25"
8	5633WC-041	12	WASHER - FLAT
9	536-5	12	WASHER - LOCK, 3/8
10	5633WC-040	12	NUT-HEX, 3/8-16



Read and understand this material before operating the Reel Cage. Failure to understand how to safely operate this Reel Cage may result in injury or property damage.

This manual is free of charge. All personnel who operate the Reel Cage should have a copy of this manual and read and understand its contents. To request a copy, call, write to the address below or visit our website. All information, specifications and product designs may change due to design improvements or updates and are subject to change without notice. Current Tools does not assume any liability for damages resulting from misuse or incorrect application of its products.

CURRENT TOOLS • P. O. BOX 17026 GREENVILLE, SC 29606
800.230.5421 or 864.721.4230 • FAX 864.721.4232 • www.currenttools.com