


JACKSON

Model 276 Security Cart —Plating Assembly—

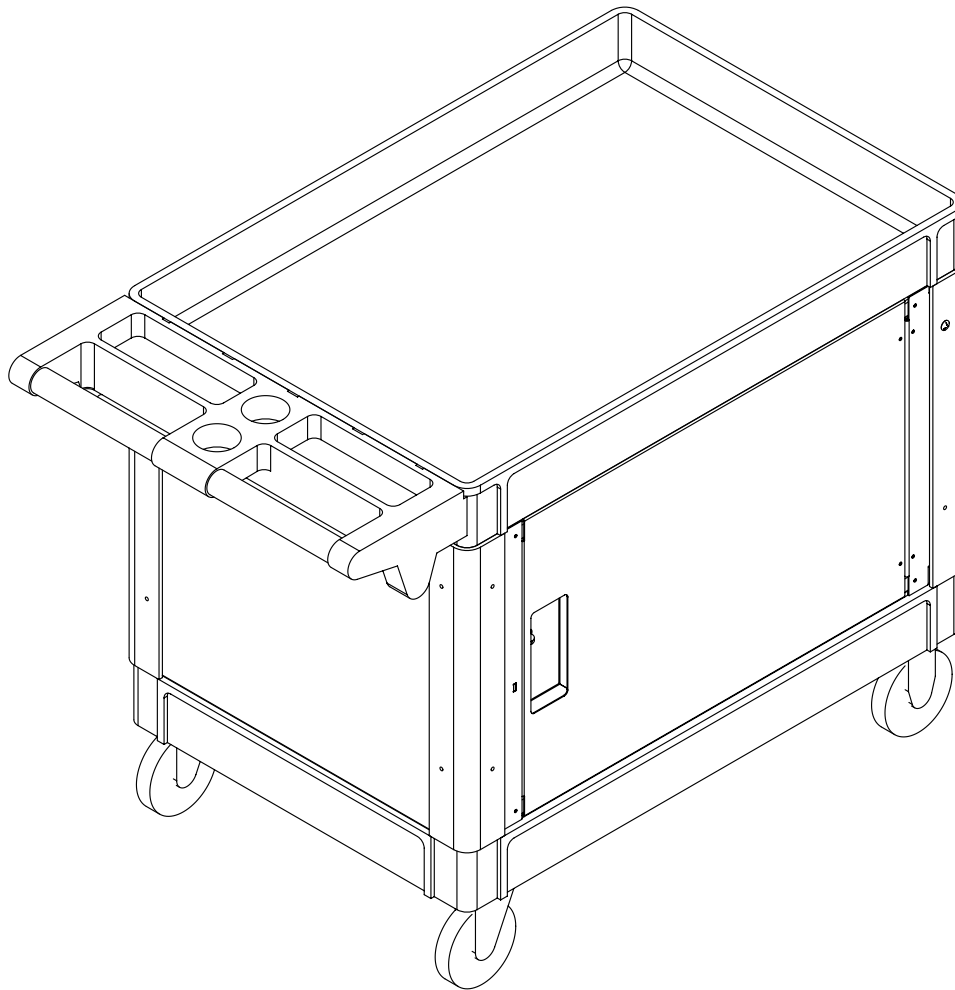

Read and understand this material before operating the Security Cart. Failure to understand how to safely operate this cart may result in injury or property damage.

This manual is free of charge. All personnel who operate the Security Cart should have a copy of this manual and read and understand its contents. To request a copy, call, write to the address below or visit our website. All information, specifications and product designs may change due to design improvements or updates and are subject to change without notice. Current Tools does not assume any liability for damages resulting from misuse or incorrect application of its products.

JACKSON TOOL • P. O. BOX 5701 • GREENVILLE, SC 29606
877-522-8995 or 864-721-4235 • FAX 864-721-4236 • www.jacksonstoolinc.com

TABLE OF CONTENTS

Safety Alerts.....	2
Important Safety Information	3
Specifications.....	3
Assembly — Plating.....	4
Assembly View	5
Parts List.....	6

SAFETY ALERTS



Safety Alert Symbol

THIS SAFETY SYMBOL is used to call your attention to instructions that concern your personal safety. It means: ATTENTION! BE AWARE! THIS IS AN IMPORTANT SAFETY INSTRUCTION!

Read, understand and follow these safety instructions. Failure to follow these safety instructions may result in injury or death.



DANGER

Immediate hazards which, if not avoided, WILL result in serious personal injury or death.



WARNING

Hazards or unsafe practices which, if not avoided, COULD result in serious personal injury or death.



CAUTION

Hazards or unsafe practices which, if not avoided, COULD result in minor personal injury or property damage.

RETAIN SAFETY INFORMATION



This manual should be read and understood by all personnel who operate or service this Security Cart. Failure to understand how to operate and service this equipment could result in serious injury or property damage.

IMPORTANT SAFETY INFORMATION

⚠ DANGER

NEVER use the Security Cart near live circuits. This is NOT an insulated tool. Contact with live circuits could result in severe injury or death.

⚠ WARNING

ALWAYS wear proper apparel, including eye protection, non-slip footwear and gloves when using this tool.

⚠ WARNING

ALWAYS keep body parts and loose clothing away from moving parts.

⚠ WARNING

DO NOT store or transport hazardous materials, flammables or fuels in the Security Cart.

⚠ WARNING

DO NOT sit, climb or stand on the Security Cart.

⚠ WARNING

ALWAYS chock the cart wheels to prevent any unintended movement.

⚠ WARNING

ALWAYS tie down the cart when transporting and ensure the Security Cart door is locked.

⚠ CAUTION

BE AWARE of pinch points.

⚠ CAUTION

DO NOT alter or modify this cart. DO NOT use the cart for a job in which it was not intended. Doing so will void the warranty.



SPECIFICATIONS


Model no.	276
Overall Dimensions	46"L x 25"W x 33"H
Total Weight Capacity	550 lbs.
Top Tray Capacity	275 lbs.
Bottom Tray Capacity	275 lbs.
Weight	90 lbs.

ASSEMBLY — PLATING


NOTE: The cart, less plating, must be assembled prior to adding the plating. Instructions for assembling the cart are included in the shipping box for the cart.

1. Assemble the Cart, less plating, according to the assembly directions provided with the Cart.
2. Locate the four predrilled bolt holes in the side columns on the right side of the Cart as you are pushing it (See exploded view on page 5) and install four Carriage Bolts from the outside. You may need to use a hammer to get the bolts through the side column.
3. Insert the door plating to the inside of the side columns and line up the holes in the plating with the four carriage bolts.
4. Attach washer, lock washer and nut to all four Carriage Bolts and tighten. Ensure the door is functional.
5. Locate the four predrilled holes in the side columns on the rear of the Cart (See exploded view on page 5) and install four Carriage Bolts from the outside.
6. Insert the rear plating to the inside of the side columns and line up the holes in the plating with four Carriage Bolts.
7. Attach washer, lock washer and nut to all four Carriage Bolts and tighten.
8. Locate the four predrilled holes in the side columns on the front of the Cart (See exploded view page 5) and install four Carriage Bolts from the outside.
9. Insert the front plating to the inside of the side columns and line up the holes in the plating with the four Carriage Bolts.
10. Attach washer, lock washer and nut to all four Carriage Bolts and tighten.
11. Locate the remaining four predrilled holes in the side columns on the side opposite the door (See exploded view page 5) and install four Carriage Bolts from the outside.
12. Install the last side panel by opening the door and turning the side panel diagonally to fit through the door. Line up the holes in the plating with the four Carriage Bolts.
13. Attach washer, lock washer and nut to all four Carriage Bolts and tighten.
14. Install Rubber Grommet in the rear plating (See exploded view page 5)

ASSEMBLY VIEW

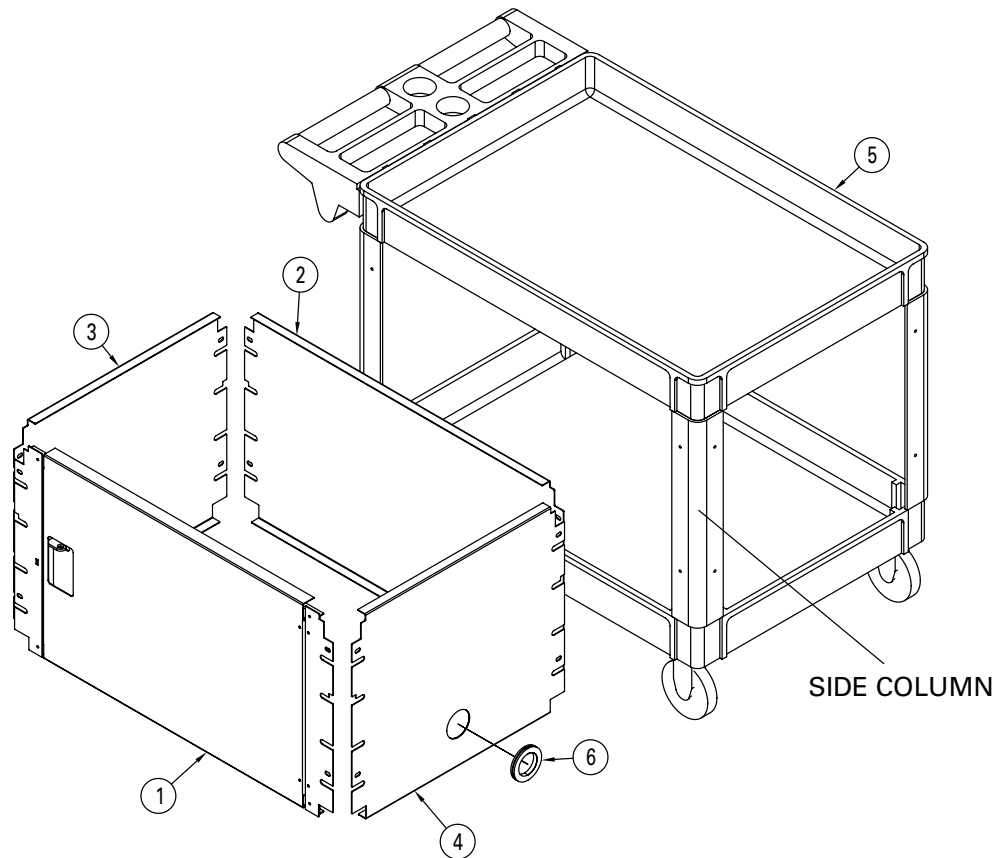

Note: Plating is installed on the **INSIDE** of the side columns.
See below for illustration.

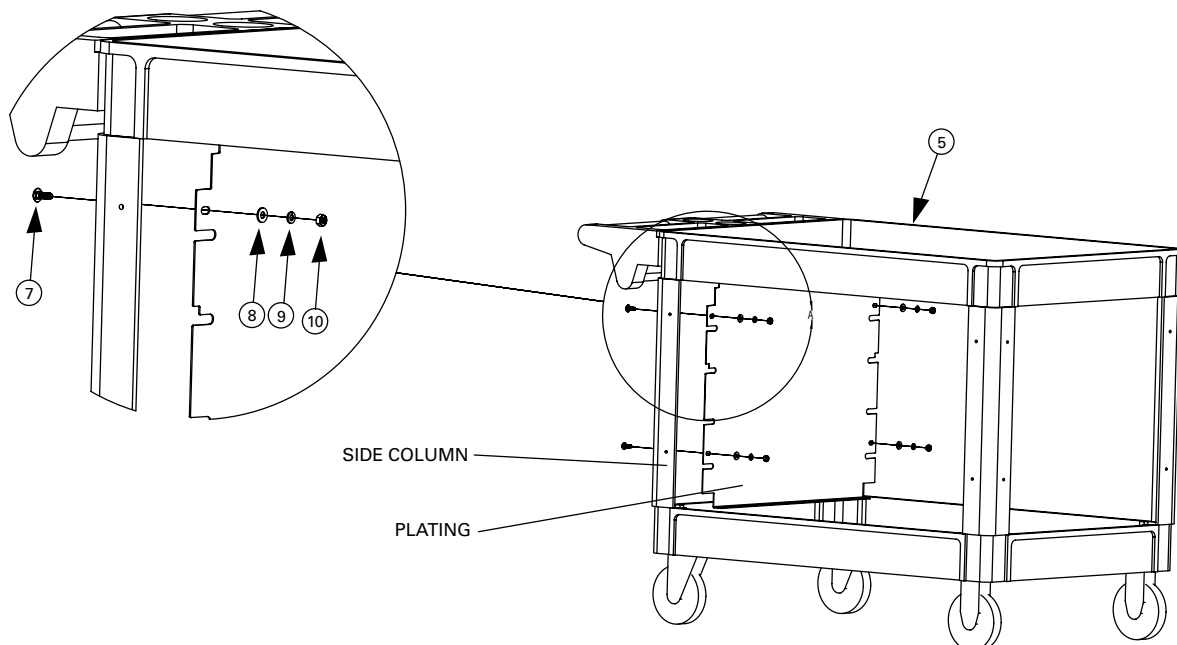



PARTS LIST

ITEM #	PART #	DESCRIPTION	QTY.
1	276-121	PLATING — DOOR	1
2	276-102	PLATING — SIDE	1
3	276-101	PLATING — FRONT	1
4	276-103	PLATING — REAR	1
5	276-001	CART (LESS PLATING)	1
6	276-002	GROMMET — RUBBER	1
7	276-004	BOLT — CARRIAGE (1/4-20 × 3/4")	16
8	224-14I	WASHER — FLAT (1/4")	16
9	450-14G	WASHER — LOCK (1/4")	16
10	450-14C	NUT — HEX (1/4"-20)	16